


**H3WL-LI CORE BARREL**

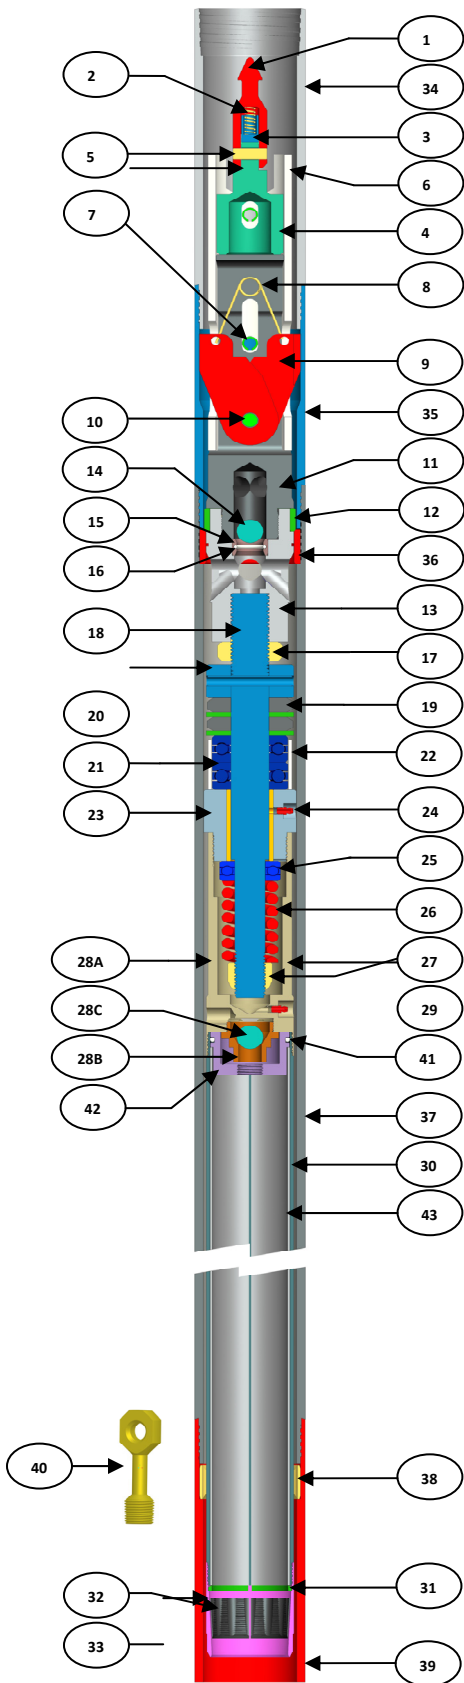

**AMKO 'LI' SERIES WIRELINE CORE BARRELS WITH LANDING INDICATOR**

	ITEM DESCRIPTION	PART NUMBERS
1-44	H3WL-LI CORE BARREL 3.0m / 10 ft	19-00-250
1-44	H3WL-LI CORE BARREL 1.5m / 5 ft	19-00-260
1-35	HK3-WL INNER TUBE ASSEMBLY	19-00-270
1-28	HK-WL HEAD ASSEMBLY	18-00-230
1	SPEARHEAD POINT	16-03-001
2	COMPRESSION SPRING	16-03-002
3	DETENT PLUNGER	16-03-003
4	POINT BODY	18-03-001
5	SOLID DOWELL 7/16" x 1"	16-03-005
6	CASE LATCH	18-03-002
7	SPRING DOWELL 1/2" x 2 3/4" - 2 NOS.	18-03-003
8	LATCH SPRING	18-03-004
9	HWL-LI LATCH - 2 NOS.	18-03-005
10	SOLID DOWELL 1/2" x 2 1/8"	18-03-006
11	UPPER BODY LATCH	18-03-007
12	LANDING SHOULDER	18-03-008
13	LOWER BODY LATCH	18-03-009
14	STAINLESS STEEL BALL 22 mm	16-03-014
15	LANDING INDICATOR BUSH	16-03-015
16	LANDING INDICATOR BUSH O RING	16-03-016
17	ADJUSTING HEX NUT	18-03-010
18	ADJUSTING SPINDLE	18-03-011
19	SHUT OFF VALVE - 2 NOS.	18-03-012
20	WASHER - 2 NOS.	18-03-013
21	THRUST BEARINGS - 2 NOS.	18-03-014
22	BEARING COVER	18-03-015
23	BEARING SPINDLE	18-03-016
24	GREASE FITTING	16-03-024
25	THRUST BEARING - 1 NOS.	18-03-017
26	COMPRESSION SPRING	18-03-018
27	NYLOCK NUT , 1" UNC	18-03-019
28	INNER TUBE CAP ASSEMBLY	18-03-020
28A	INNER TUBE CAP	18-03-021
28B	CHECK VALVE BODY	18-03-022
28C	STAINLESS STEEL BALL , 22 mm	16-03-014
29	GREASE FITTING	16-03-024
30	INNER TUBE 1.5m / 5 ft	18-03-023
30	INNER TUBE 3.0m/ 10 ft	18-03-024
31	RING STOP 3T	19-03-025
32	CORE LIFTER 3T	19-03-026
33	CORE LIFTER CASE 3T	19-03-027
34	LOCKING COUPLING	18-02-001
35	ADAPTER COUPLING	18-02-002
36	RING LANDING	18-02-003
37	OUTER TUBE 1.5m / 5 ft	18-02-004
37	OUTER TUBE 3.0m/ 10 ft	18-02-005
38	STABILIZER RING	18-02-006
39	THREAD PROTECTOR	18-02-007
40	PISTON PLUG	19-04-001
41	O RING	19-04-002
42	CORE EJECTION PISTON	19-04-003
43	SPLIT TUBE 1.5m / 5ft	19-04-004
43	SPLIT TUBE 3.0m / 10 ft	19-04-005
44	PUMP OUT ADAPTOR 1/2" NPT	19-04-006